



### Step 1:

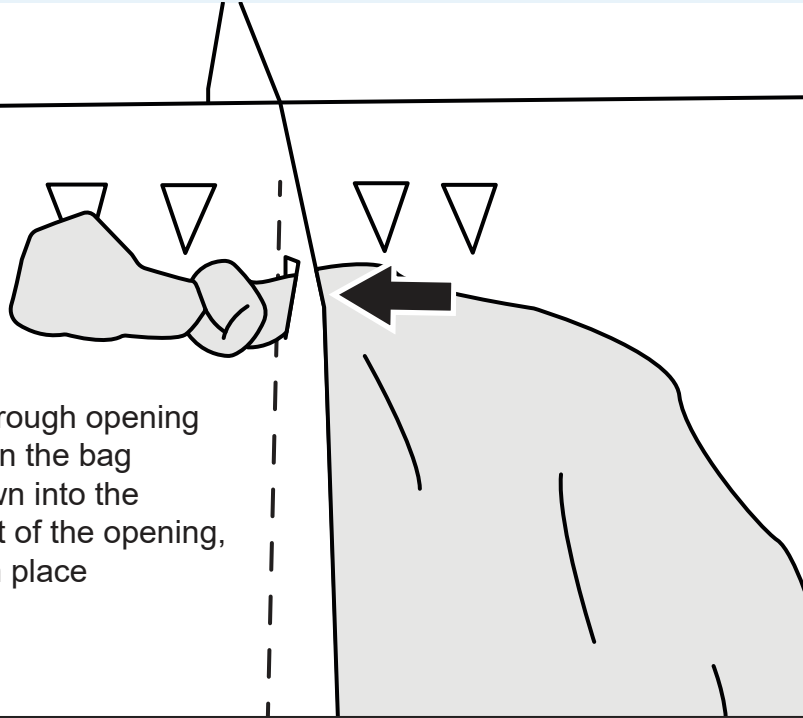


1. Pull bag through opening
2. Tie a knot in the bag
3. Slide it down into the narrow part of the opening, locking it in place

### Step 2:

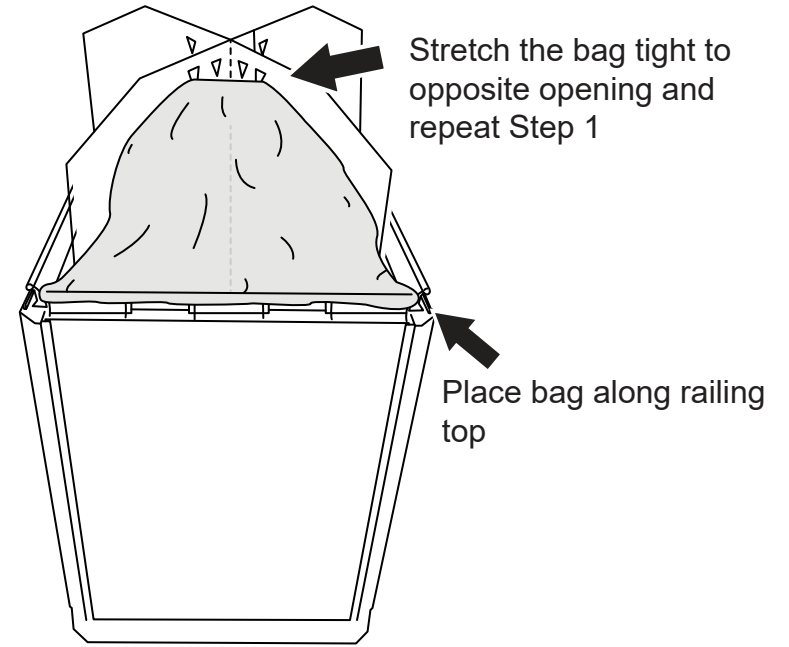

### Step 3:

Place Dome Lid onto bin and then push down to snap it onto the rails

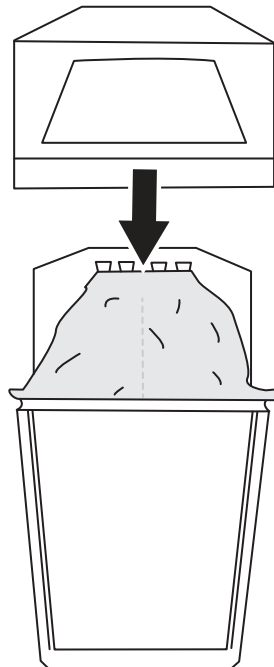

### Step 4:

NOTE: Bag should not hang over the outside of the lid covering the graphic display panels. This will present a "neat appearance"

